

MAGNETIC FIELD HiTESTER 3470

Environmental Measuring Instrument



Fully Meeting the Testing Needs to
Assure a Safer Environment Against
Exposure to Magnetic Fields



Time domain evaluation complying with IEC 62233*1 and EN 50366*1 magnetic flux measurements to gauge human exposure to electromagnetic fields.

Choose from two magnetic field sensors: 100 cm² and 3 cm².

Bundled with PC application offering RMS logging, batch export and tester setup functions.



ISO 9001
JMI-0216



ISO 14001
JQA-E-90091



www.hioki.com

HIOKI company overview, new products, environmental considerations and other information are available on our website.

Accurately measure magnetic field density to determine human exposure levels

Features

■ **Exposure level measurements for compliance testing**
Time domain evaluation as per IEC62233*1 and EN 50366*1

■ **A choice of two tri-axial isotropic magnetic field sensors**
Two magnetic field sensors that have a cross-sectional area of 100 cm² and 3 cm², respectively

■ **Memory function for saving measurement data**
Store up to 99 measured data items like a digital camera stores images

■ **Three selectable magnetic flux density units**
Select T (Tesla), G (Gauss) or A/m.

■ **Bundled PC application software**

The tester comes with three convenient functions available via the USB interface.

■ **Wide 10 Hz – 400 kHz measurement frequency band**
Covers both commercial and IH (induction heating) frequency ranges.

■ **A wealth of output functions**

Output tri-axial waveforms and composite RMS values for analysis on an oscilloscope or monitoring on a PC.

■ **Three selectable magnetic flux density units**
Select T (Tesla), G (Gauss) or A/m.

Compliance testing of household appliances

The Magnetic Field HiTESTER 3470 easily and quickly provides tri-axial RMS and composite RMS values for the general public and occupational exposure levels as stipulated in ICNIRP 1998. This enables the tester to perform time domain evaluations as prescribed in IEC 62233*1 and EN 50366*1, making it the ideal tool for compliance testing of household appliances.

Magnetic field sensor 3471 (100 cm²)
Use this sensor for IEC 62233 and EN 50366 standard measurements


Magnetic field sensor 3472 (3 cm²)
Use this sensor for measuring spatial distribution of magnetic fields and for determining coupling factors in the standard.

Customer service related to magnetic field testing

The exposure level measurement mode measures human exposures levels as a percentage of the reference level for human exposure level stipulated in ICNIRP 1998. These measurements can be used as a customer service in magnetic field testing other than product compliance testing. (*)

(*) Exposure level mode indicates a percentage (%) of the general public and occupational exposure levels set out in ICNIRP 1998. However, this does not indicate the level of risk involved.

Magnetic Field HiTESTER 3470

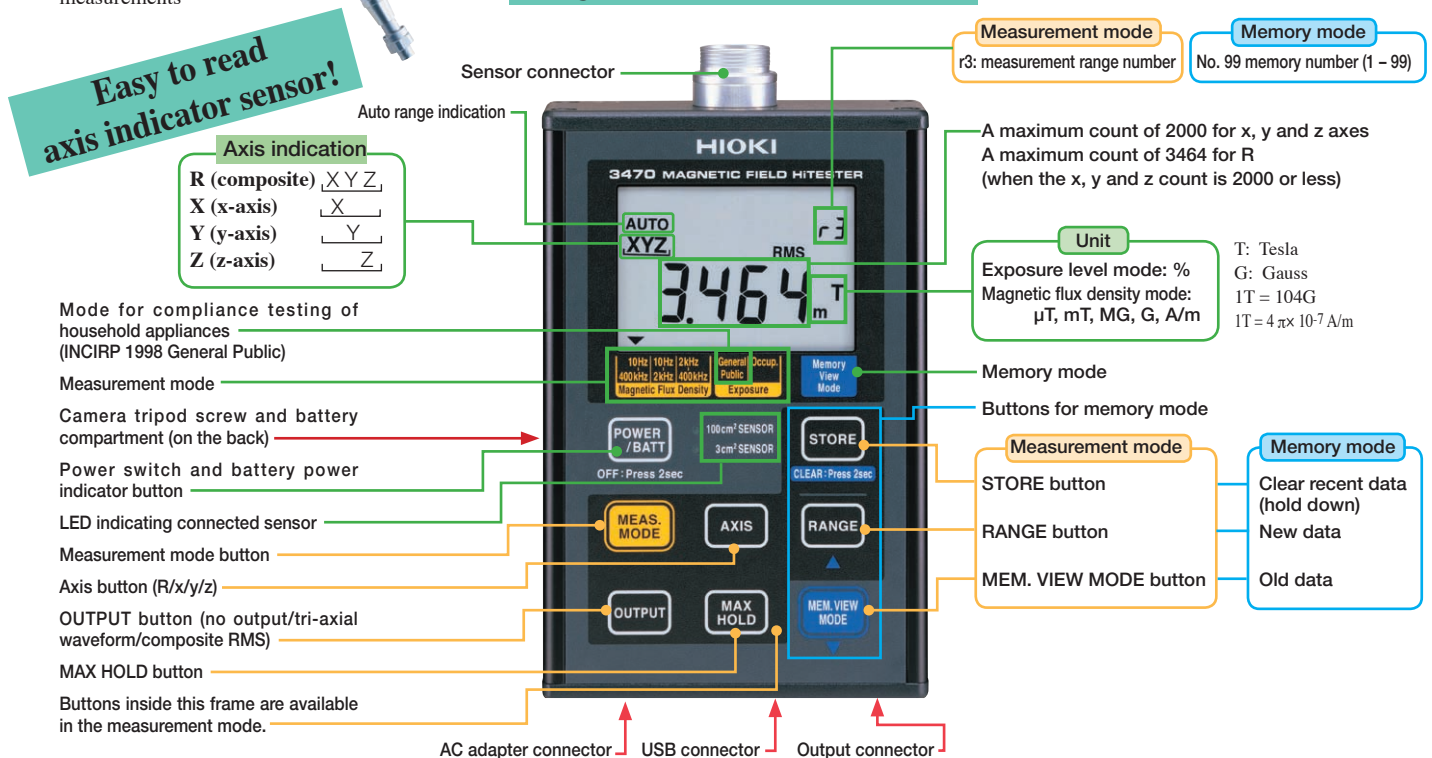

Glossary

● IEC 62233 and EN 50366

IEC 62233 is an international standard while EN 50366 is a European standard for measuring human exposure to magnetic field emissions generated by household electrical appliances. The award of the CE mark requires passing an EN 50366 test.

● ICNIRP 1998

A set of guidelines announced by the ICNIRP (International Commission on Non-Ionizing Radiation Protection) in 1998 defining reference levels of general public and occupational exposure to magnetic and electrical fields

● Time domain evaluation



This is an evaluation method often combined with FFT and other frequency domain evaluation methods. The Magnetic Field HiTESTER 3470 uses an ICNIRP 1998 compliant filter to generate the necessary weighting in the instrument to enable time domain evaluation.

Measurement examples provided by the output function


Tri-axial waveform monitoring and FFT analysis

When connected to a Memory HiCORDER or oscilloscope, the Magnetic Field HiTESTER 3470 can output three-axial waveforms for monitoring both in the magnetic flux density and exposure level measurement modes.

Tri-axial waveform output

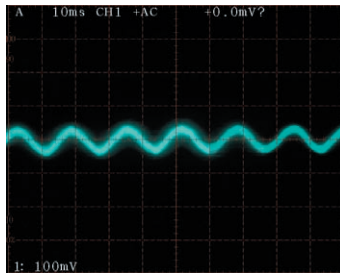


■ Example of waveform measurement using 3471, 60 Hz, 0.1 μT (= 1 mG)
(When the tester is connected to an analog oscilloscope.)

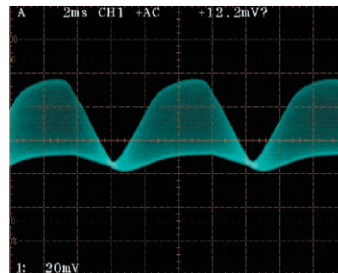

■ Example of IH equipment waveform measurement
(When the tester is connected to an analog oscilloscope.)



- IEC 62233*1 measurement example
Rice cooker
- Fill up to one-half with water
 - Set maximum temperature
 - Keep a distance of 30 cm
 - Measure the entire frequency range

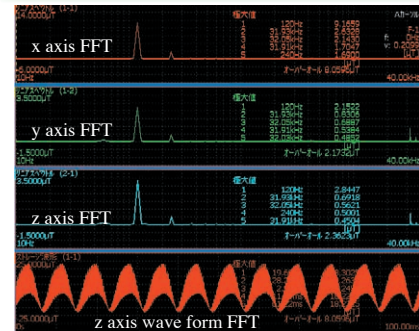


■ 3-channel FFT measurement of IH rice cooker
(When the tester is connected to an 8861 Memory HiCORDER.)

Extended RMS measurements

The Magnetic Field HiTESTER 3470 enables recording of RMS values when connected to a logger or recorder.


Two or more testers can be combined for simultaneous recording of data for separate locations.

Composite RMS value output

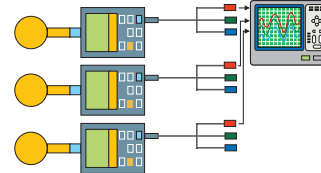


USB interface links to three useful PC applications

● RMS logger

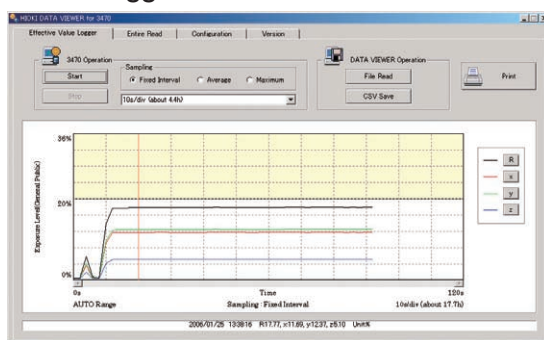


Connect the Magnetic Field HiTESTER 3470 to a PC for extended recordings of measurement data such as tri-axial (x, y, z) and composite (R) RMS values in CSV format. Select from three sampling methods: fixed interval, average and maximum value.

● Batch export

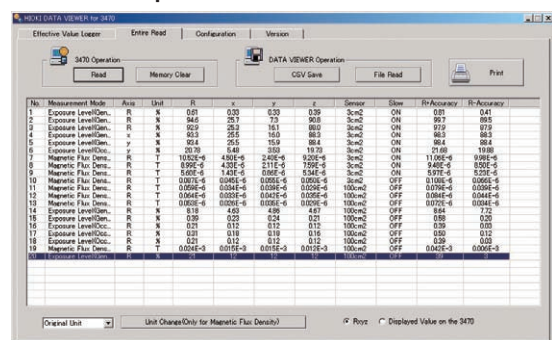

This function enables quick exporting of up to 99 measurement data items stored in the Magnetic Field HiTESTER 3470, a convenient feature when a device must be measured at multiple points.

● Tester Setup

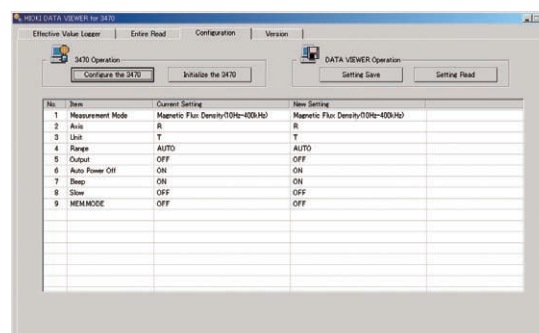

The Magnetic Field HiTESTER 3470 can be set up from the PC application. The settings or measurement conditions are stored on the PC to permit any subsequent downloading that may become necessary

■ Application software specifications

Compatible OS: Windows 98, ME, 2000, XP

Functions: RMS logger, batch export and tester setup

Maximum number of data items handled:
32000 (RMS logger), 99 (batch export)
measurement data items

Storage format: CSV format

● Magnetic Field HiTESTER 3470 specifications

Measurement accuracy will be maintained when the tester and sensor are used in an environment where the temperature is 23°C ±5°C and humidity is 80% RH or less and no condensation

Basic specifications

● Measurement mode

Magnetic flux density : 10Hz to 400kHz / 10Hz to 2kHz / 2kHz to 400kHz

Exposure level : General Public/ Occupational

(Exposure level is defined as a measurement method whereby the time domain evaluation introduced in EN 50366 and IEC 62233 applied to the magnetic flux density indicated in the ICNIRP 1998 Guidelines.)

Measurement range :

Range number	r0	r1	r2	r3	
Magnetic flux density	2.000 μT	20.00 μT	200.0 μT	2.000 mT	(At single axis)
Exposure level	20.00%	200.0%	2000%	-	(At single axis)

Range switching : Auto/manual

● Indication

Digital indication : 2000 count for single axis and 3464 count for composite value R (a count of 2000 or less for the x, y and z axes)

Indicated axes : x, y, z, R

Magnetic flux density unit : T

Exposure level unit : %

Switching magnetic flux density : G (1T = 10⁴G), A/m (the magnetic permeability of air being 4 π × 10⁻⁷H/m, 1T = 4 π × 10⁻⁷A/m)

Battery low warning :  on icon lights (measurement accuracy is not guaranteed when this icon is on)

Maxi value hold indication : MAX

Auto power off indication : APS

Display update rate : 250 ms (slow function off)/approx. 2 s (slow function on)

● Measurement items

Measured axes : x, y, z

Measurement method : True rms

Measurable magnetic flux density: (Frequency derating)

Measurement items	Magnetic flux density (Tesla)	Magnetic flux density (Gauss)	Magnetic flux density (A/m)
x, y, z	0.050μT ^{*1} to 2.000mT	0.50mG ^{*1} to 20.00G	0.040A/m ^{*1} to 1592A/m
R	0.100μT ^{*2} to 3.464mT ^{*3}	1.00mG ^{*2} to 34.64G ^{*3}	0.080A/m ^{*2} to 2757A/m ^{*3}

*1: Range r0 for the magnetic field sensor 3472 is 0.2 μT (= 2 mG = 0.16 A/m) in the magnetic flux density mode (10 Hz – 400 kHz and 10 Hz – 2 kHz).

*2: Range r0 for the magnetic field sensor 3472 is 0.4 μT (= 4 mG = 0.32 A/m) in the magnetic flux density mode (10 Hz – 400 kHz and 10 Hz – 2 kHz).

*3: 2 mT (= 20 G = 1592 A/m) or less for x, y and z

Combined indication accuracy : ±3.5%rdg.±0.5%f.s. (when combined with a 3471 or 3472 magnetic field sensor with the same model number)

Prescribed accuracy range :

Measurement items	Measurement mode	Prescribed accuracy range	f.s.
x, y, z *4	Magnetic flux density mode	0.050μT to 2.000mT	2000 count
	Exposure level mode	0.50% to 2000%	
R *5	Magnetic flux density mode	0.100μT to 3.464mT	3464 count
	Exposure level mode	1.00% to 3464%	

Range r0 (10 Hz – 400 kHz and 10 Hz to 2 kHz) in the magnetic flux density mode for the magnetic field sensor 3472 is described below

Measurement items	Measurement mode	Prescribed accuracy range	f.s.
x, y, z *4	Magnetic flux density mode (10Hz to 400 kHz, 10 Hz to 2 kHz)	0.200μT to 2.000μT	2000 count
R *5		0.400μT to 3.464mT	3464 count

*4: Specified at an input of 50 counts or more of the range *5: Specified at 100 counts of the range and where the total x, y and z input is 2000 counts or more

Prescribed accuracy range (frequency) :

Measurement mode	Prescribed accuracy range
Magnetic flux density mode (10Hz to 400kHz)	50Hz to 120kHz
Magnetic flux density mode (10 Hz to 2 kHz)	50Hz to 1kHz
Magnetic flux density mode (10Hz to 400kHz)	5kHz to 120kHz
Exposure level (General Public)	Prescribed at 50 Hz and 10 kHz of the 10 Hz to 400 kHz band in ICNIRP 1998
Exposure level (occupational)	

● Output

Output mode : Magnetic flux density (T or G; A/m indication can be converted to T) or exposure Output mode e level

Output voltage rate : 200 mV/f.s. (f.s. for single axis of each range; single axis f.s. is also used for composite RMS value)

Output type/accuracy : tri-axial waveform, composite RMS/indication accuracy ±2 mV

General specifications

Interface : USB 1.1

Memory function : Records up to 99 measurements

Auto power off : 10 min after last operation

Buzzer sound : Can be turned on/off

Temperature characteristics : 0.1% accuracy specification/ °C at 0 to 40°C

Storage environment : -10 to 50°C, 80% RH or less (no condensation)

Operating environment : 0 to 40°C, 80% RH or less (no condensation)

Period of guaranteed accuracy : 1 year

Power supply : Size AA alkaline batteries (LR6) × 4 or AC adapter

Battery life : Approx. 10 h

Dimensions & mass : 100(W)×150(H)×42(D) mm, 870 g (including batteries)

Applicable standards : Safety EN61010-1:2001

EMC EN61326:1997+A1:1998+A2:2001+A3:2003

EN61000-3-2:2000 EN61000-3-3:1995+A1:2001

Accessories : User's Guide, CD-R (proprietary PC application), USB cable, size AA batteries (LR6) × 4, carrying case

● Magnetic field sensor 3471/3472 specifications

Sensor cross-sectional area : 3471; 100 cm²
3472; 3 cm²

Rated magnetic flux density : 2 mT (frequency derating)

Frequency characteristics : 10Hz to 400kHz

Measured axes : x, y, z

Storage : -10 to 50°C, 80% RH or less (no condensation)

Operating : 0 to 40°C, 80% RH or less (no condensation)

Period of guaranteed accuracy : 1 year

Dimensions & mass : 3471; Ø122×295 (L) mm • 220g

3472; □ 27×165 (L) mm • 105g

Applicable standards : Safety EN61010-1:2001

EMC EN61326:1997+A1:1998+A2:2001+A3:2003

EN61000-3-3:2000 EN61000-3-3:1995+A1:2001

*1 ICNIRP1998

MAGNETIC FIELD HiTESTER 3470-01

Includes: Magnetic Field HiTESTER 3470
Magnetic field sensor 3471 (3 axis, 100 cm² sensor)
AC adapter 9445-02 or 9445-03 (EU)

MAGNETIC FIELD HiTESTER 3470-02

Includes: Magnetic Field HiTESTER 3470
Magnetic field sensor 3471 (3 axis, 100 cm² sensor)
Magnetic field sensor 3472 (3 axis, 3 cm² sensor)
AC adapter 9445-02 or 9445-03 (EU)
Extension cable 9758
Output cable 9759

Options

Extension cable 9758 (length from sensor to tester: 1.5m)
Output cable 9759 (1.5 m, output BNC terminal x 3)

The extension cable 9489 for connecting insulation BNC is available upon special order. Please inquire with your authorized HIOKI distributor.

Note: Company names and Product names appearing in this catalog are trademarks or registered trademarks of various companies.



HIOKI E. E. CORPORATION

Headquarters :

81 Koizumi, Ueda, Nagano, 386-1192, Japan
TEL +81-268-28-0562 / FAX +81-268-28-0568
http://www.hioki.co.jp / E-mail: os-com@hioki.co.jp

HIOKI USA CORPORATION :

6 Corporate Drive, Cranbury, NJ 08512 USA
TEL +1-609-409-9109 / FAX +1-609-409-9108
http://www.hiokiusa.com / E-mail: hioki@hiokiusa.com

HIOKI (Shanghai) Sales & Trading Co., Ltd. :

1608-1610, Shanghai Times Square Office, 93 Huai Hai Zhong Road
Shanghai, P.R.China POSTCODE: 200021
TEL +86-21-63910090/63910092 FAX +86-21-63910360
http://www.hioki.cn / E-mail: info@hioki.com.cn

Beijing Office : TEL +86-10-84418761 / 84418762

Guangzhou Office : TEL +86-20-38392673 / 38392676

HIOKI INDIA PRIVATE LIMITED :

Khandela House, 24 Gulmohar Colony Indore 452 018 (M.P.), India
TEL +91-731-4223901, 4223902 FAX +91-731-4223903
http://www.hioki.in / E-mail: info@hioki.in

HIOKI SINGAPORE PTE. LTD. :

33 Ubi Avenue 3, #03-02 Vertex, Singapore 408868
TEL +65-6634-7677 FAX +65-6634-7477
E-mail: info@hioki.com.sg

DISTRIBUTED BY