


SGK

TORQUE GAUGES

Capable of accurately measuring very low torque values.



SGK

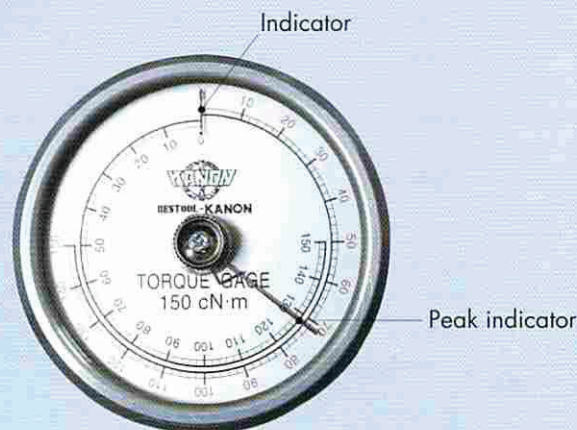


SGK-G (with peak indicator)


* Peak indicator is optional

FEATURES

- Due to their miniature design and light weight, these gauges are convenient and easy to carry.
- A three part chuck with knurled surface enables firmly gripping even odd shapes.
- The inset scale face helps avoid incidental damage.
- The gauges measure clockwise and counterclockwise.
- With scales on the sides and the face, torque readings can be obtained either way.
- Accuracy : $\pm 3\%$ of the indicated value over the full range

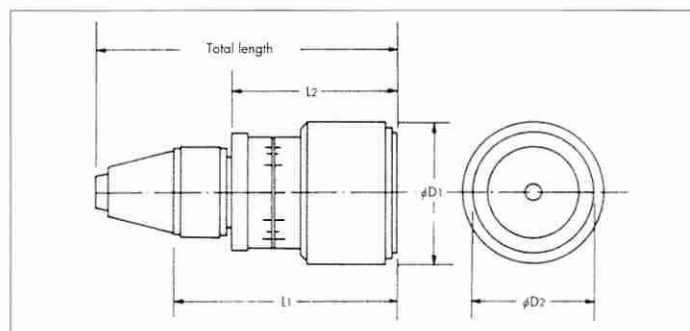

USING AN SGK GAUGE

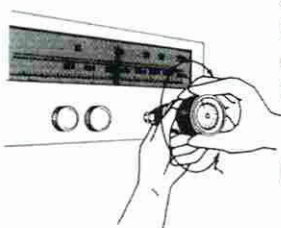

Starting torque can be measured with the chuck gripping a knob or shaft of an electronic device.
Rotate clockwise or counterclockwise.

(Rotate CW or CCW)



- If you would like SGK with a peak indicator, please specify "SGK-G" on your purchase order.
ex). N150(I)SGK-G

Three part chuck

Model SGK	Range (CW/CCW)	Increment	Model N-SGK	Range (CW/CCW)	Increment	Chucking dia.	Total length	Dimensions (mm)				Weight
	gf·cm / kgf·cm			mN·m/cN·m				Grip dia.		Total length (without chuck)		
						φmm	mm	φD1	φD2	L1	L2	kg
90 (I) SGK	10~90 gf·cm	2 gf·cm	N90 (I) SGK	1~9 mN·m	0.2mN·m	1-6.5	106	43	36	83	57.5	0.29
150 (I) SGK	20~150 "	2 "	N150 (I) SGK	2~15 "	0.2 "							
300 (I) SGK	40~300 "	5 "	N300 (I) SGK	4~30 "	0.5 "							
600 (I) SGK	50~600 "	10 "	N600 (I) SGK	5~60 "	1 "							
1200 (I) SGK	100~1200 "	20 "	N1200 (I) SGK	10~120 "	2 "							
2400 (I) SGK	200~2400 "	50 "	N2400 (I) SGK	20~240 "	5 "	1-8.5	132	63	53	102	72	0.6
1.5 (II) SGK	0.1~1.5 kgf·cm	0.02kgf·cm	N1.5 (II) SGK	1~15 cN·m	0.2 cN·m							
2.4 (II) SGK	0.2~2.4 "	0.02 "	N2.4 (II) SGK	2~24 "	0.2 "							
3.6 (II) SGK	0.4~3.6 "	0.05 "	N3.6 (II) SGK	4~36 "	0.5 "							
6 (II) SGK	0.5~6 "	0.1 "	N6 (II) SGK	5~60 "	1 "							
9 (II) SGK	1~9 "	0.2 "	N9 (II) SGK	10~90 "	2 "							
15 (II) SGK	1~15 "	0.2 "	N15 (II) SGK	10~150 "	2 "							